


Flucard® Pro - Server Upload

Step by Step Tutorial

Version 1.0 Trek 2000 International Ltd.

Step 1: Set up your Flucard® Portal account or Personal Server

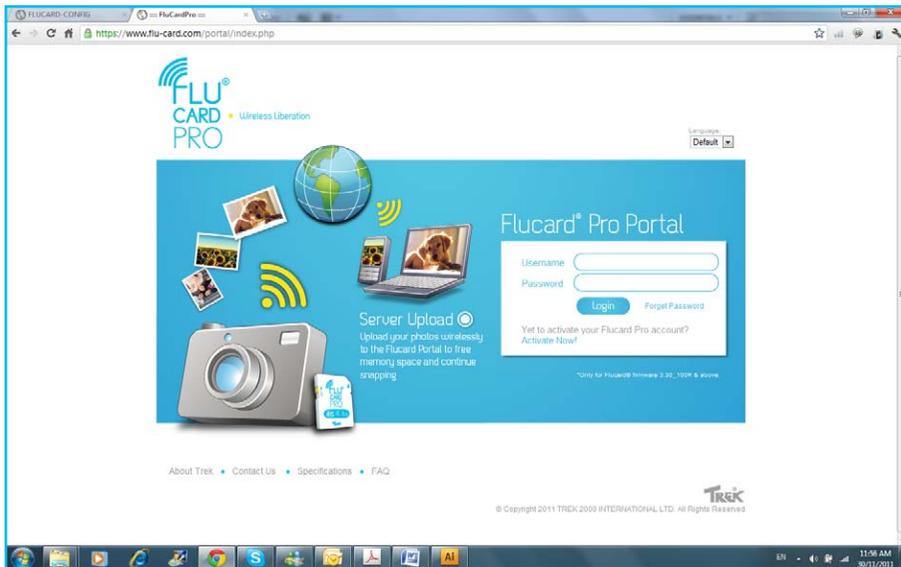


1) To begin with, register your card in the [Flucard® Portal](#) and instantly enjoy 2GB of free storage space online. Alternatively, you can set up a personal server online

Step 1a: Set up a Personal Server

(Skip to Step 2 if you are using the Flucard® Portal as the server for your uploads)

* There are a few methods to setup a Personal Server.

As an example, we shall set up a simple FTP server using FileZilla Server.

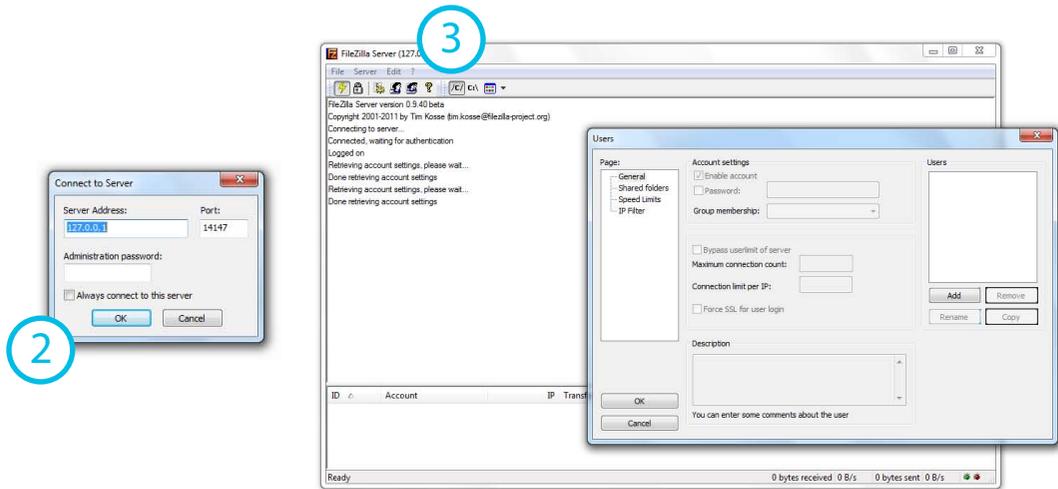


1) Download and install [FileZilla Server](#).


2) Run the program and connect to the server with the Admin Interface (If you did not alter the Port number during installation, just keep everything as default and click OK).

3) Set up a server user by choosing Users from the Edit menu.

4) Add a new user and assign a password. (In the example below, the Username is set as ***“flucard”***).


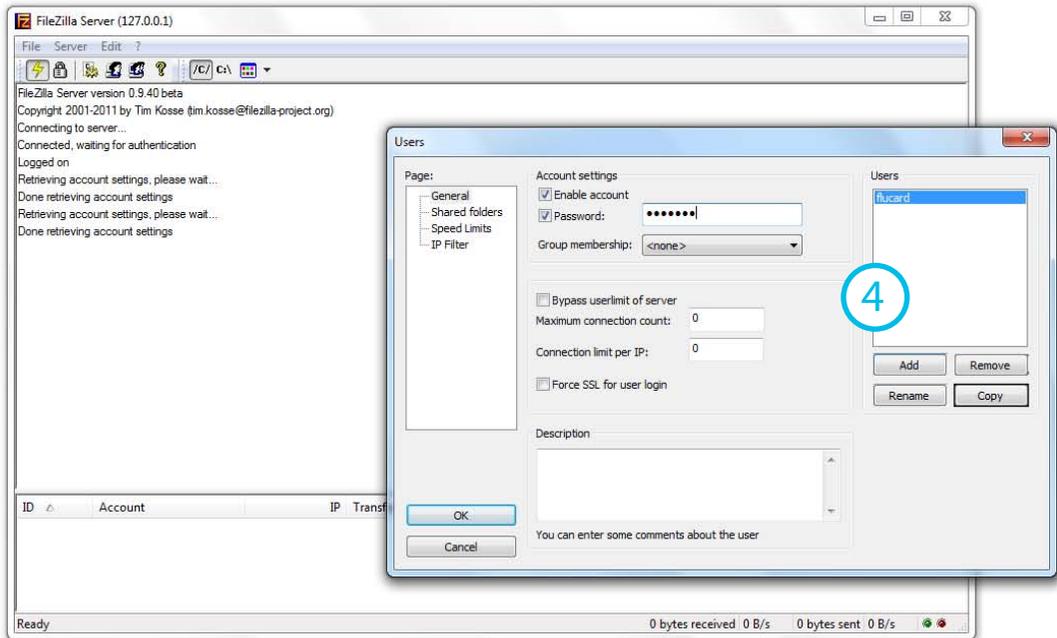


- 5) Add a folder under the Shared folders section ("**C:***flucard media*" for example).
- 6) Tick all the check boxes under the Files and Directories column to give the user full access rights to the folder.
- 7) You are done setting up your FTP server. Click OK and exit program.

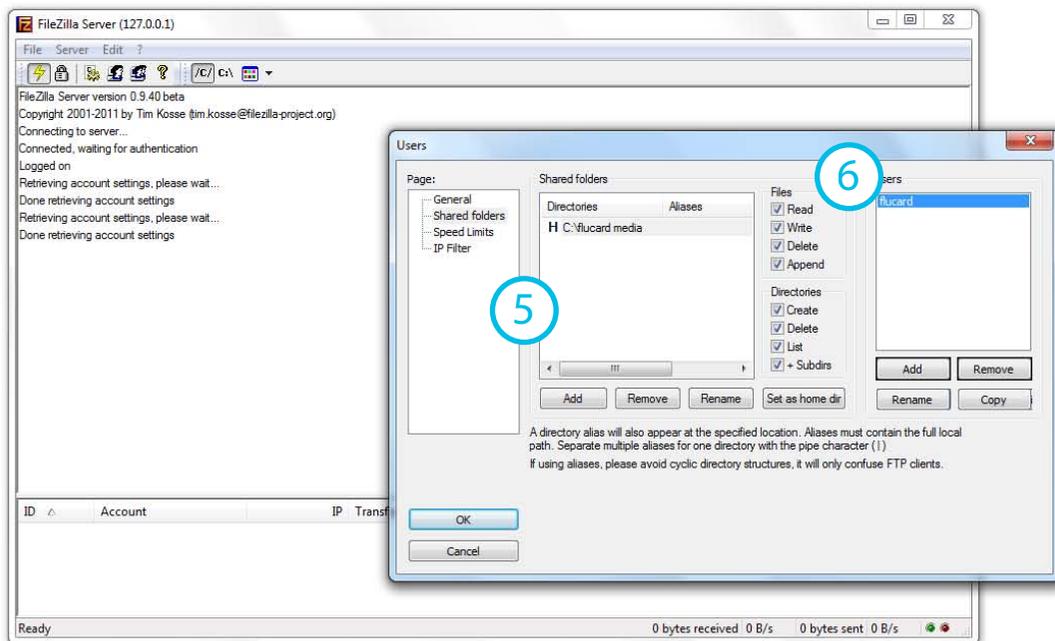

Step 1b: Configure Windows Firewall for Personal Server

- 1) Open Windows Firewall under Control Panel.
- 2) Add "**FileZilla server.exe**" into the list of programs that can communicate through the Firewall.
- 3) Do NOT select "FileZilla Server Interface" from the list, instead click on "Browse..."
Locate the directory you installed FileZilla Server to (normally "C:\Program Files\FileZilla Server\")
- 4) Select "**FileZilla server.exe**" and press open (Once again, NOT "FileZilla Server Interface.exe")

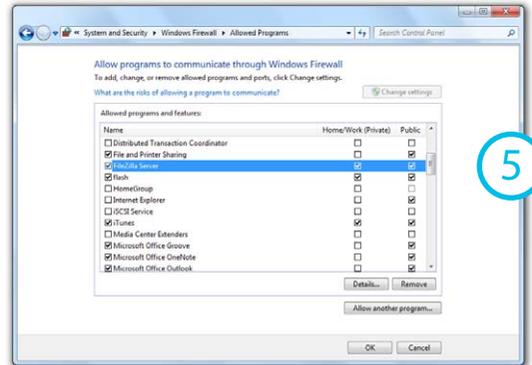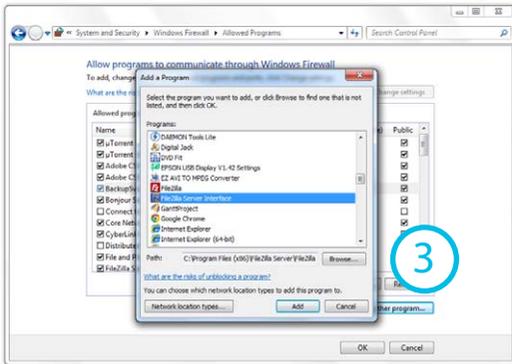

- 5) Verify that "**FileZilla server.exe**" is added to the list with check marks in the boxes next to it. Click the OK button to close the window.

Step 2: Configure Flucard® Pro to connect with server

- 1) Access the Flucard® Pro Settings page by using a Web Browser on your PC (refer to the Flucard® Pro User manual for more info on Configuration of Flucard® Pro).

FLUCARD-CONFIG

192.168.1.1

FLUCARD PRO • Wireless Liberation

Brought to you by **TEK**

Choose a language

Existing access point

Choose from existing AP [Search again](#)

Number of APs (Maximum : 30)

Order #1

SSID :

KEY :

Server Setting

Server Type :

Server Path :

User Name :

Password :

- 2) Key in the SSID and KEY(password) of the Wi-Fi router you are using for server upload.
- 3) Setup your Server Setting (Change the parameters only if you are uploading to your personal server as they have been pre-configured to upload to Flucard® Portal).

4) In the example below, we have set up our Server Setting to upload Flucard® content to the FTP server which we have created in Step 1A.

Existing access point

Choose from existing AP [Search again](#)

Number of APs
(Maximum : 30)

Order #1

SSID :

KEY :

Server Setting

Server Type :

Server Path :

User Name :

Password :

Server Type: **FTP**

Server Path: **192.168.3.158** (IP address of your server)

Username: **flucard**

Password: (password set in Step 1a for the user "flucard")

4

5) Save your configuration by clicking the SAVE button at the bottom of the page.

Step 4: Test your Server Upload

- 1) After the setup, restart your camera for the settings to take effect.
- 2) Upload photos from Flucard® Pro to the server of your choice (refer to the Flucard® Pro User manual for more info on Server Upload).
- 3) Access your Flucard® Portal account or Personal Server to check for uploaded photos.
- 4) You are now ready to start [Shooting, Uploading and Sharing!](#)





Discover more @ www.flu-card.com

© Copyright 2010 TREK 2000 INTERNATIONAL LTD. All Rights Reserved